



## Folding Footbath User Manual

service@ooambb.com  
Product Model: BE-F2200RC

Please keep the instruction manual properly  
The printed manual may be omitted or slightly inconsistent with the design  
version . The company reserves the right of final interpretation

## catalogue

|                                          |   |
|------------------------------------------|---|
| 01 STATEMENT OF SECURITY MATTERS         | 1 |
| 02 ATTENTIONS                            | 2 |
| 03 CONTROL PANEL                         | 3 |
| 04 PRODUCT PARAMETER AND PRODUCT DIAGRAM | 4 |
| 05 Proper use of steps                   | 4 |
| 06 Open Steps                            | 5 |
| 07 Folding Steps                         | 5 |
| 08 CUSTOMER SERVICE                      | 6 |
| 09 FREQUENTLY ASKED QUESTIONS            | 6 |

## 01 STATEMENT OF SECURITY MATTERS

Please read all instructions before using this product!  
Please pay particular attention to and observe the following safety precautions.

**⚠ DANGER:** To reduce the risk of electric shock,  
remove the power plug from the socket after use or before cleaning the product.

**⚠ WARNING:** To reduce the risk of fire,  
burns, electric shock, or injury to others follow these instructions.

1 Do not use power other than 120V AC.

2 This product is strictly prohibited without water heating such as inadvertently turned  
on the heating function in the absence of water!

3 It is strictly prohibited to be immersed in water cleaning or rinsing.  
otherwise it will cause poor insulation, leakage, short circuit and other hazards.

4 When no one is using the machine, please make sure to unplug the electrical appliances from the socket,  
When the machine is not in daily use, or before installing/disassembling parts, be sure to remove the power  
plug from the socket in a timely manner.

5 If this product is used by children or people with physical or mental impairments or disabilities,  
adult supervision and guidance are required.

6 Do not use this product if the power cord or plug is damaged, if it is not operating properly,  
or if it is damaged in any way, or if it has been dropped in water.

7 Do not use spare parts other than those recommended by the manufacturer.

8 Do not drag the power cord to move the product or use the power cord as a grip.

9 To disconnect the power supply, switch off all operating controls before removing  
the power plug from the socket.

10 Power cord must be kept at a safe distance from the heating surface.

11 Heat-insensitive persons or minors should use this product only under the supervision  
of a normal person or an adult. Failure to do so may result in injury.

12 Supervise and make sure that children do not use the footbath as a play equipment to ensure  
their safety.

13 Individuals are not allowed to disassemble or repair this product by themselves.

## 02 ATTENTIONS

People who are not suitable to use this product

- Warning**
- Those who use pacemakers or other medical electronic devices embedded in the body.
  - Those who are receiving medical treatment, especially those who feel abnormalities in their body.
  - Patients suffering from malignant tumors, heart disease, severe hypertension, diabetes, etc.
  - Pregnant women, infants, and menstruation.
  - Those who suffer from skin diseases or broken skin on their feet.

Things to know when using

- Attention**
- Children and disabled people with intellectual disabilities should be used in supervised situations.
  - This footbath has a heating surface. When using the footbath people who are not sensitive to heat must pay attention to using it under the company of others.
  - Do not pour hot water above 122°F into it, so as to avoid excessive heat scalding the skin and damaging the product. This footbath is for one person at a time. Do not use it by two or more people at the same time.
  - Do not use this product when drunk or unwell.
  - Do not use it immediately after meals to avoid discomfort.
  - When using the product do not wear accessories on your feet.
  - During use, if your body appears or feel uncomfortable, please stop using it immediately and consult a doctor.
  - Do not ride on the product to avoid injury or malfunction.
  - When using in winter, drain the water in the footbath after use to avoid freezing the parts.
  - The foot bath should be cleaned immediately after use to avoid infection of skin diseases when used by others.
  - Do not mop the floor or pull the power cord to move the product so as not to damage the product.
  - It is recommended to use it for 30-40 minutes each time.

- Prohibition**
- If liquid leaks from the appliance the appliance can no longer be used.
  - If the product is found to be damaged cracked leaking unrelated parts exposed it is, prohibited to use it.
  - Do not use it under the condition of no water or little water.
  - It is forbidden to stand in the product or put other heavy objects in it.
  - Do not let children use or play.
  - Do not immerse the product in water to avoid accidents or product failure.
  - If there are abnormal noises, smells or smoke during use, stop using it immediately.
  - Do not disassemble the internal components of the product privately to avoid the possibility of machine failure.
  - Except for repair technicians designated by our company, the product must not be disassembled. If you have any questions about repair and modification, please contact the dealer in time.

- Pull out plug**
- When performing maintenance, please unplug the power plug from the socket. In addition, do not insert or unplug the plug with wet hands to avoid electric shock and injury.
  - After use or when it is not applicable, please unplug the power plug from the socket.
  - In the event of a power failure, please immediately turn off the power switch and unplug the power plug from the broadcast base.

 
Use environment

- Attention**
- Do not use this product at room temperature above 104°F.
  - Do not use this product in a humid or excessively dusty environment to avoid electric shock or machine failure.
  - Do not place the product outdoors.
  - Do not place the crystals near the stove or in direct sunlight.
  - Do not use it during lightning strikes, and pull the power plug away from the power socket.

About the power plug or power cord

- Attention**
- Do not use a power supply above the rated voltage to avoid fire or damage to the product.
  - Do not use wet hands to unplug the power supply to avoid electric shock.
  - Do not squeeze the power cord by products or other heavy objects.
  - When unplugging the power cord, hold the plug of the power cord instead of the wire.
  - Do not damage, excessive bending, pulling, twisting, or knotting the power cord. If the power cord or power plug of the foot massager is damaged, please do not use it.
  - It must be replaced by an agent or a technical maintenance department with equivalent qualifications to avoid danger.

## 03 CONTROL PANEL

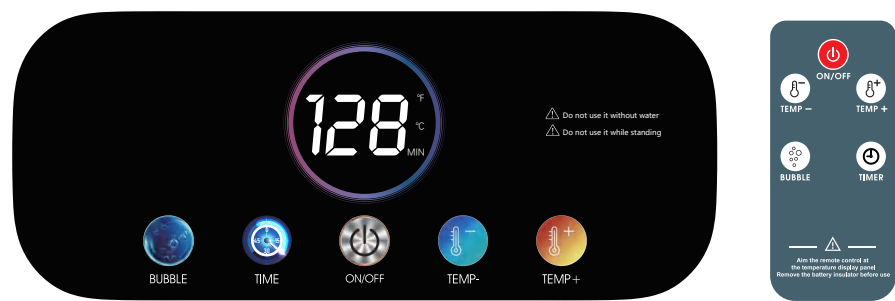

### 1, ON/OFF

Press ON/OFF button to turn on, press it again to turn off.  
Heating, bubbles, red light, timer functions turn on at the same time.  
Default setting temperature is 108°F. Default timer time is 60 minutes.

### 2, Temperature Setting

a. The touch panel displays the real-time temperature.  
b. When the water temperature is lower than the preset temperature, the heating function will be automatically turned on.  
e. When the water temperature reaches the preset temperature, the heating function will be automatically turned off.

### Temp +

Press Temp + to increase the temperature, the range is 95°F-118°F cycle, long press to increase continuously.

### Temp -

 
Press the Temp- to reduce the temperature, the range is cycling by 118°F-95°F-118°F, long press to continuously reduction.

### 3, Timer

Press Timer, minus 10 minutes every time you press it. 60, 50, 40, 30, 20, 10, 60 minutes, cycle. (Default timer is one hour)

### 4, Bubble


Press it to stop the bubble, then press it again to turn it on.

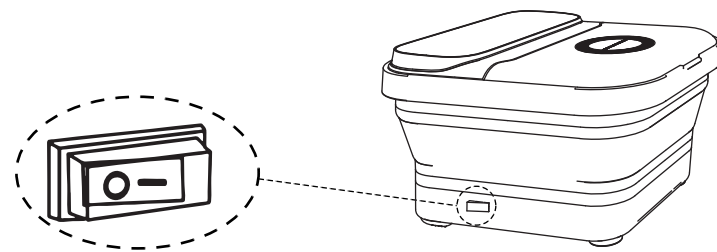

Please press the power button on the left before use

## 04 PRODUCT PARAMETER AND PRODUCT DIAGRAM
 
| Nominal Voltage | Nominal Frequency | Rated Power | Security Design |
|-----------------|-------------------|-------------|-----------------|
| 120V            | 60Hz              | 500W        |                 |

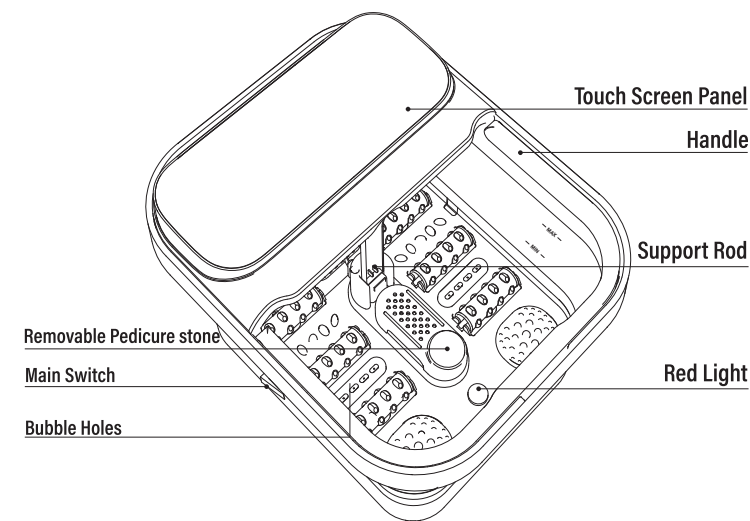


## 05 Proper use of steps

- step1 Opening this Collapsible foot spa tub according to the manual.
- step2 Please inject water between Min and Max water volume line!!!
- step3 The product is connected to the power supply.
- step4 Turn on the 1st located on the left-hand side, only provides power.
- step5 Turn on the 2nd located on the screen, to activate the foot spa bath features.
- step6 Enjoy a relaxing foot spa.
- step7 Fold this foot spa tub according to the manual.

### Note:

When using it, remember to lift the support rod.  
Before folding, remember to put down the support rod.
 
## TO REPLACE THE BATTERY, SEE BELOW

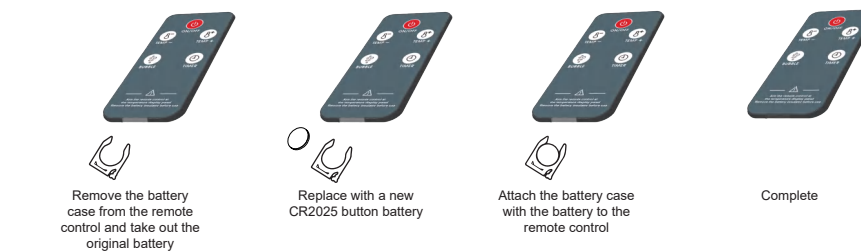

**Note:** When using the remote control, you need to aim at the display screen.

## WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN.**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



## 06 Open Steps



## 07 Folding Steps



## 08 CUSTOMER SERVICE



If you're not completely satisfied with your purchase, simply return the merchandise via our official customer.



We guarantee your product is free from defects in product material and workmanship for one (1) year starting from the date of purchase during normal use of household conditions. If your appliance fails to operate properly within our warranty period, we will arrange a new one. Replacement is free and all shipping costs are covered.



If you are still unable to resolve the issue you are experiencing please contact us immediately via our support email. It doesn't matter if the product has been installed or not, our customer support team will respond within 24 hours and assist you quickly and efficiently. The most efficient way to confirm your problem to us is to attach a video, which illustrates your product issues.

## 09 FREQUENTLY ASKED QUESTIONS

| Problem                                   | Cause                                                                                                                                                                                                                                        | Solution                                                                                                                                                                                                            |
|-------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No power                                  | The product is not connected to the power supply properly.                                                                                                                                                                                   | Please check and make sure that the product has been connected to the power supply.                                                                                                                                 |
| The product does not heat.                | Power is not turned on.                                                                                                                                                                                                                      |                                                                                                                                                                                                                     |
| The product does not work                 | The product is not connected to the power supply properly.                                                                                                                                                                                   | Please use strictly following the user manual.                                                                                                                                                                      |
| Quick opening and folding                 | The basin is too big.                                                                                                                                                                                                                        | Watch web videos/read manuals.                                                                                                                                                                                      |
| The product stops working during the use. | The product has worked beyond the preset working time.                                                                                                                                                                                       | Please press the "ON/OFF" button to restart it.                                                                                                                                                                     |
| Can not turn on                           | The water temperature exceeds 125°F.                                                                                                                                                                                                         | Change warm or cold water.                                                                                                                                                                                          |
| Leakage problem                           | 1. Transportation damage caused the chassis to rupture to leak water.<br>2. Dry burning without adding water, burning a hole to leak water.<br>3. When the MAX water level is exceeded, heated water condenses and drop from the inside lid. | You can contact us and we will get back to you within 24 hours.<br>Or, you can reach us via after-sales email.                                                                                                      |
|                                           |                                                                                                                                                                                                                                              |                                                                                                                                                                                                                     |
| whole Product                             | Having issue(s) while reading the instruction                                                                                                                                                                                                | You can contact us and we will get back to you within 24 hours.<br>Or, you can reach us via after-sales email.                                                                                                      |
|                                           | Encountering non-human caused damage during usage.                                                                                                                                                                                           |                                                                                                                                                                                                                     |
|                                           |                                                                                                                                                                                                                                              | If the product is damaged due to non-human causes please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution. |